# Polarizing Beamsplitter Plate

PBS Plate Series Datasheet



PBS Beamsplitters (mounting optional)

#### **Applications**

- Head-Mounted Display (HMD)
- Head-Up Display (HUD)
- 2D & 3D Projection Display
- Interferometry
- Medical/Dental Imaging

Standard Product Options					
<b>Product Name</b>	Description				
*PBS02A	Standard PBS, No AR				
BCU7GCE1 (PBS02A+OC)	Standard PBS No AR, Protective Overcoat <sup>TM</sup>				
PBFF2A	Standard PBF on Flat Fused Silica Substrate, No AR				
FBF04C	High Contrast PBS on Flat Borofloat Substrate, With AR				
BSU7N2E1	High Transmission PBS No AR (VC4 only)				

\*AR coating available on request (PBS02C) PBF02A & PBF02C available upon request

See OPT-DATA-1011 for size and mounting options

ProFlux® beamsplitter Nanowire® Technology is optimized to operate at 45°, providing durable polarizing beamsplitters. These beamsplitters can be used for a variety of both imaging and non-imaging applications for display products and scientific instruments. The ProFlux polarizing beamsplitter's wide angular aperture, excellent performance and exceptional reliability offer an excellent design choice.

Made with highly durable materials, ProFlux provides pure polarization that gives a high contrast and bright image for the life of the projector. The ProFlux polarization mechanism aligns ideally with the LC display and has excellent polarization uniformity even over large apertures, providing bright, high contrast, long-lasting displays.

Features	Benefits			
Nanowire® Technology	Brightness and contrast uniformity			
	Excellent for optical designs with $f/\# < f/2.0$			
	Wavelength and AOI independent			
	±20° AOI without depolarization			
	Broadband			
Inorganic	High heat resistance			

General Specifications									
	PBS02A and BCU7GCE1	PBFF2A	FBF04C	BSU7N2E1					
Wavelength Range:	420 - 700nm	420 - 700nm	420 - 700nm	420 - 700nm					
Substrate Type:	Display Glass	Fused Silica	Borofloat®	Display Glass					
Substrate Flatness:	N/A	2μm PV over	12.35µm PV over	N/A					
		90mm diameter	90mm diameter						
Thickness:	$0.7\pm\!0.07mm$	$1.6 \pm 0.1 mm$	$1.6\pm\!0.1mm$	$0.7\pm\!0.07mm$					
Index of Refraction:	1.598 (435.8nm)	1.461 (532nm)	1.472 (588nm)	1.598 (435.8nm)					
	1.5078 (643.8nm)			1.5078 (643.8nm)					
Thermal Expansion:	37.6 x 10 <sup>-7</sup> /°C	6.5 x 10 <sup>-7</sup> /°C	3.25 x 10 <sup>-6</sup> /°C	37.6 x 10 <sup>-7</sup> /°C					
	(0 - 300°C)	(15 - 200°C)	(20 - 300°C)	(0 - 300°C)					
AOI (Angle of Incidence):	$45^{\circ}\pm15^{\circ}$	$45^{\circ}\pm15^{\circ}$	45° ±15°	45° ±15°					
AR Coating:	Optional	Optional	Visible	Optional					
Maximum Temperature:	200°C, >5,000 hrs	200°C, >5,000 hrs	200°C, >5,000 hrs	200°C, >5,000 hrs					
Transmission Axis (TA):	Referenced to	Referenced to	Referenced to	Referenced to					
	long side of part	long side of part	long side of part	long side of part					
TA Tolerance:	±1°	±1°	±1°	±1°					
Dimensional Tolerance:	$\pm 0.2 mm$	$\pm 0.4 mm$	±0.4mm	±0.2mm					
Edge Exclusion:	2mm	2mm	2mm	2mm					
RoHS:	Compliant	Compliant	Compliant	Compliant					
Visual Criteria:	VC0, VC2, VC4	VC0, VC2, VC4	VC0, VC2, VC4	VC4 only					


Do not touch or clean the wire-grid polarizer surface otherwise the polarizer will be damaged.



Performance Specifications at 45°												
	450nm			550nm			650nm					
Product	Tp% (min)	Ts% (max)	Eff % (min)	Rp% (max)	Tp% (min)	Ts% (max)	Eff% (min)	Rp% (max)	Tp% (min)	Ts% (max)	Eff% (min)	Rp% (max)
PBS02A* (No AR, Standard)	82.5	0.39	74.0	-	86.8	0.22	75.0	-	86.8	0.15	75.0	-
BCU7GCE1 (No AR, with Overcoat)	72.0	0.50	67.0	-	83.0	0.30	75.0	-	84.0	0.20	70.0	-
PBFF2A (No AR, Standard, Flat F.S.)	83.0	0.25	75.5	3	85.5	0.15	76.7	2	85.5	0.1	77.0	3
FBF04C (With AR, High Contrast, Borofloat)	83.0	0.05	75.5	3	85.5	0.05	76.7	3	85.5	0.05	77.0	3
BSU7N2E1 (No AR, High Transmission)	87.0	0.70	76.0	-	88.0	0.20	77.0	-	88.0	0.15	78.0	-


**Tp-** Transmitted "p" polarization, **Ts-** Transmitted "s" polarization, **Rs-** Reflected "s" polarization, **Rp-** Reflection "p" polarization, **Eff=** Tp \* Rs /100 \*AR coating available on request (PBS02C)


## **Example Optical Performance (Tested at 45°)**

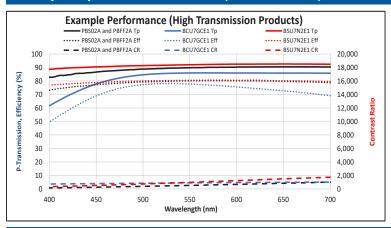



## **Example Variable Angle Optical Performance**

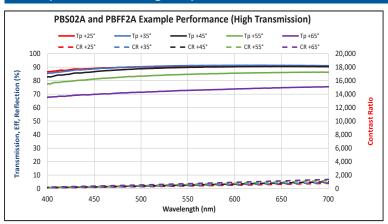

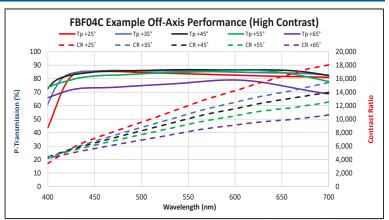

Performance data was taken from sample evaluations. Some part-to-part variation is expected.

#### **Usage Recommendations**

To obtain the best transmission and contrast, the beamsplitter should be used to transmit the p-polarization, using the standard definition of p-polarization and s-polarization. It is possible to use the beam splitter in the orthogonal orientation (transmission of the s-polarization), but with reduced efficiency and contrast. In a projection system it is recommended that the wire-grid surface be positioned to face the imager and projection lens to ensure the reflection is from the front surface of the beamsplitter.

For more detail, please use our Polarizer Comparison Tool at www.moxtek.com

For warranty and ordering information, please visit www.moxtek.com.

